


TEST DOSING INSTRUCTION

1




Ensure the container is sufficiently filled.

2

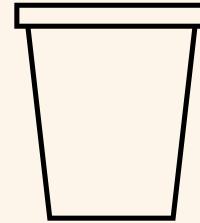


Take a sample of the product to be checked and then discard it.

3

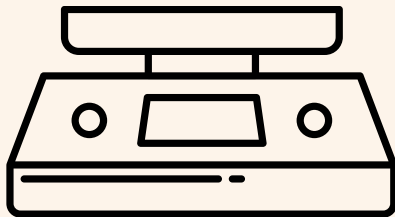


Place a cup on the scale and reset to 0 by pressing TARE.

4

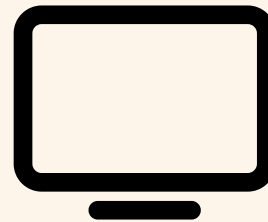

Go to the **operator menu** → **vending machine** → **relevant container/bean grinder** → **test dosing**. Press Start, collect the product, and read from the display the amount dispensed by the coffee machine.

5

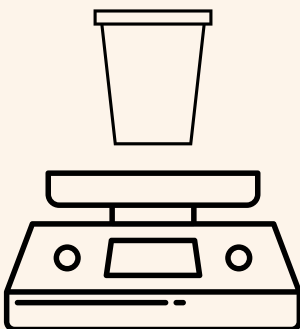

Weigh the cup with its contents. Repeat this three times.


6

0.5

If the average of the three test doses deviates by more than 0.5 grams, start the calibration procedure.


CALIBRATION INSTRUCTION

1

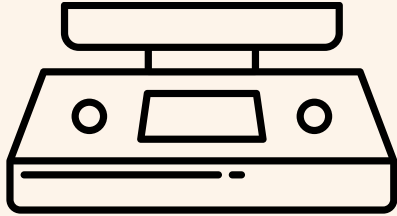


Place a cup on the scale and reset to 0 by pressing TARE.

2

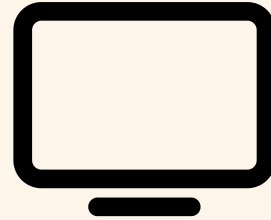


Go to the **operator menu** → **vending machine** → **relevant container/bean grinder** → **calibration**. Press **Start**.

3

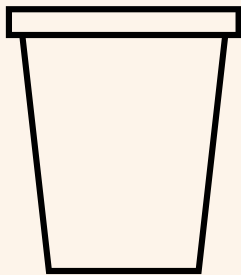

The coffee machine will dispense the product three times. Collect it.

4

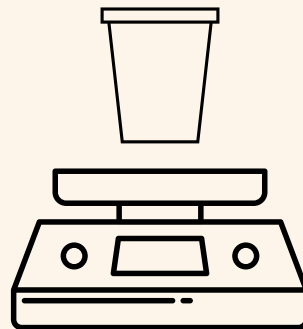


Weigh the total dispensed amount.

5



Enter the weighed value (including decimals) and press OK.

6

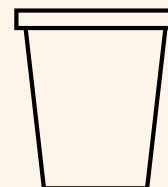

Perform a test dose again to check if the setting is now correct. If the dose deviates by 0.5 grams, repeat the calibration procedure.